

#### Voice and Remote Control Smart Door Lock



# **User Manual**

## Contents

Package Cont	ent		4
Interface			5
Drilling Temp	late		6
Latch Backset	: Adjustment		6
ASSEMBLY INS	STRUCTION		7
Pair U-Lock w	ith the SGUDA ap	op	14
SGUDA app In	terface		17
User Access o	verview		
Connection st	atus		19
Normal/Open	/Private mode se	etting	21
Normal mo	ode (N)		21
Open mod	e (O)		21
Private mo	de (P)		22
Add user acce	SS		23
App Permis	ssion		23
3 access lev	vels		25
3 access m	odes (Guest)		25
Passcode C	Only		26

Settings Introduction
Keyless Access29
Fingerprints hiding passcode29
Preamble Passcode29
Change Door handing29
Change Wifi30
Auto-Lock
Customized Sound and LED light(Bluetooth connected)31
Sound31
LED Light32
S/N number33
Siri, Alexa, Google Assistant
Siri33
Alexa
Google Assistant37
Notification Setting
Update Bluetooth and Wifi43
Bluetooth43
Wifi45
Unlink U-Lock
Reset U-Lock 48

### SGUDA U-Lock

## sguda U - Locka

# Package Content



Part	Description	Qty.
А	Кеу	2
В	Cylinder	1
С	Keypad Module	1
D	Deadbolt Latch	1
E	Strike Plate	1
F	Mounting Plate	1
G	Receiver Module	1

Part	Description	Qty.
Н	Battery Cover	2
I	Drive-in Sleeve	1
J	Short Screws	3
К	Wood Screws	5
L	Deadbolt Chassis Screws	4
М	Bottom Cover	1

# Interface

#### SGUDA U - Locka



(1) Cancel Button	6 Reset Button
To cancel settings	Restore default seetings
2 Enter Button	7 Arrow
To confirm settings	Assemble direction
③ Cylinder	8 Turn Button
To lock/unlock the lockset by key from outside	
(4) Sliding Lid	9 Disassemble the Turn-piece Case
Slide up and down to close or reveal the cylinder	Press and slide the bottom case downward to disassemble
5 Battery Holder	10 Bottom Case
Insert AAA batteries x 4	11) Slide Lid

# **Drilling Template**

#### Print the original size for drilling



## Latch Backset Adjustment

Determine if the latch needs to be adjusted to the 2-3/4"(70mm) backset. To adjust, rotate the latch

it stops. Reverse the direction to return to the 2-3/8" (60mm) backset.



## **ASSEMBLY INSTRUCTION**





# **Backset determination**

Backset is a distance from door edge to center of hole on door face.

Adjustable **D** Latch fits both backset of 2 3/8" (60 mm) and 2 3/4" (70 mm).



# Latch Backset Adjustment

Determine if the **O** Latch needs to be adjusted to the 2 3/4" (70 mm) backset. To adjust, rotate the **O** Latch until it stops. Reverse the direction to return to the 2 3/8" (60 mm) backset.



# Mark the Door with Template

Select the height and backset as desired on the door face; use the **TEMPLATE** as an indication to mark the center of the circle on the door face and the center of the door edge.



# **Drill Holes**



Using the marks as a guide to drill a hole Ø2 1/8" (54 mm) through the ⓐ door face for the lockset, then a hole of Ø1" (25.4 mm) ⓑ for latch.



# Mark the Outline of Latch Faceplate

Insert the **DLatch** and ensure it is parallel to the door face. Mark the outline of the faceplate, then take out the **DLatch**.



Make sure the cross in the latch is on the bottom

**Note:** It is not necessary to chisel the door edge for the faceplate installation if you use the drive-in latch.



# Chisel Space for Latch Faceplate

Chisel 5/32" (4 mm) deep along the outline to allow the faceplate to be aligned with the door edge.

**Note:** It is not necessary to chisel the door edge for the faceplate installation if you use the drive-in latch.



# Install Latch



Insert the **D** Latch into the door. (Make sure the cross is on the bottom of the Latch.) Use 2 **W** Wood Screws to secure Latch.

Please do not fully tighten the screws until lock is completely installed.

₩ Wood Screws x 2



# Install Drive-in Latch

Drive the **D**Latch into the hole on edge of door.



Make sure the cross in the latch is on the bottom.



# Mark the Outline of Strike

To identify the center of strike: close the door to lay the latchbolt against the door frame.

Mark the center line on the doorframe exactly opposite the latch hole in the door edge.



# Drill Hole on Door Frame

1. Measure one half of door thickness from door stop and vertically mark center line of strike. Drill 1" (25.4 mm) hole, 1" (25.4 mm) deep at intersection of horizontal and vertical line of strike.

SGUDA

U-Locka

2、Chisel 5/64" (2 mm) deep along the strike outline to allow the strike to be aligned with the doorframe.

# 

# Install Strike on Door Frame

Install the <sup>C</sup> Strike Plate into your door frame and tighten with <sup>C</sup> Wood Screws.

Wood Screws x 2



# Install Keypad Assembly #1

Make sure the latch bolt is retracted.



# Install Keypad Assembly #

Install **B** Cylinder into the Keypad assembly with tailpiece in horizontal position inserted through hub of the latch.



# Install Keypad Assembly #3

Pass the IC Wire under the **D** Latch to the interior side of the door, and insert the tailpiece through the cross-shaped crank of the latch





# Install Inside Mounting Plate

Pass the IC Wire through the wire hole of the **B** Mounting Plate. Fix the Mounting Plate with **D** Deadbolt Chassis Screws.

If outside lock assembly is lopsided, please loosen the Screws to adjust its position and tighten the Screws again.

Deadbolt Chassis Screws x2 (\*Page 3)





# **Identify Door Handing**

Face the door from the outside. The door is Left-handed if the Hinges are on the left side of the door, whereas the door is Right-handed if the Hinges are on the right side of the door.



# Adjust Thumb Turn Piece

Rotate the thumb turn piece to the LEFT at 45 degrees For Right-handed Doors.

Rotate the thumb turn piece to the RIGHT at 45 degrees For Left-handed Doors.

Note: The thumb turn piece is opposite to the latching side.



# Install Receiver Module Remove the **()** Battery Cover. (push it up first then pull it out.)

#### SGUDA U - Locka



## **Install Receiver Module**

Press "**RELEASE**" and slide the **M** Bottom Case to remove.



# Install Receiver Module

Connect the IC Wire into the back of the Receiver Module. Ensure that the deadbolt tailpiece is engaged with turn piece, then attach Receiver Module to the door with **O** Screw. Use the optional **C** Wood Screw to secure the Receiver Module to wood doors only.

Wood Screw x 1

Machine Screws x 3

# **Insert Batteries**

Complete Assembling with Battery Cover
Insert AAA Battaries x4



## Pair U-Lock with the SGUDA app



- 1. Download the app on <u>Apple store</u> or <u>Google play</u>
- 2. Select from the following platforms to register an account



3. Go to Menu on the top left corner>Press "+Setup Device" > Select your lock



4. Set the name for Home and the Lock





5. Connect to the Wifi

	Wifi Setup	$\times$
<		С
	Choose a Wifi	
NETGEA	R25	
deco-sg	juda	
deco-sg	Juda	
ACI 10 0	0	
Set up later	in settings	
	$\bigcirc$	

#### 6. Identify door handing and follow the instruction

#### SGUDA U-Locka



#### SGUDA U-Lock





## **User Access overview**

There are three roles (Admin, Owner, Guest) to access the door. Support up to 60 users.

1. Admin: The person who has paired U-lock will be an Admin as default. Admin can give up the

role of "Admin" to another person.

- ✓ Swipe to switch modes (Normal, Private, Open mode)
- ✓ Add, delete owners and guests
- ✓ Access to the Activity log
- ✓ Lock Settings
- ✓ Remote Lock/Unlock the door
- 2. Owner
  - ✓ Add, delete owners and guests

- ✓ Access to the Activity log
- ✓ Lock Settings
- ✓ Remote Lock/Unlock the door
- 3. Guest
  - ✓ Passcode lock/unlock the door
  - ✓ Passcode lock/unlock, remote lock/unlock the door

# **Connection status**

1. Not connecting to the Wifi



#### SGUDA U - Lock

#### 2. Wifi connected

#### SGUDA U-Locka



3. Bluetooth connected





Swipe left or right to switch different modes

## Normal mode (N)



## Open mode (O)



The door stays unlock, suitable for office or

during a house party

Four ways entry

 $\checkmark$ 

 $\checkmark$ 

✓

Remote lock/unlock

Passcode unlock

Bluetooth unlock

#### SGUDA U-Lock

# Private mode (P)



Besides the selected users, no one is allowed to enter the room, suitable for private meetings or other special occasions

## **App Permission**

1. Go to +Add users >App Permission



2. Input the email and name of the user (Note: The person who can be added by email must

download the SGUDA app and register an account first.)



#### 3. There are <u>3 access levels</u>\* (Owner, Guest, and Blocked)





4. Add user

	e ——	
×sa	GUDA Hostel   Roon	n1 ۞
		+ Add Users
Administra	tor	
🕛 s	GUDA TAIWAN	
Owner		
	lirry	
Guest		
Passcode	Only	
Blocked		
	I	2

Note:



#### 3 access levels

1. Owner: Access to add/delete user, activity feed, Lock setting, lock/unlock the door via the

SGUDA app

- 2. Guest: Enter code to unlock or lock/unlock via the SGUDA app, <u>3 access modes\*</u>
- **3. Blocked**: The user who's been blocked has no permission to the door

#### 3 access modes (Guest)

• —		• —		• —	-
SGUDA Hostel   Ro	oom 1 දිරි	SGUDA Hostel   Room	n1 {Ô}		el   Room 1 🄅
<	SAVE	<	SAVE	<	SAVE
How often dose need t Room 1?	o access	How often dose need to ac Room 1?	ccess	How often dose n Room	eed to access 1?
Always		Always		Always	
Schedule		Schedule		Schedule	
Repeat	0	Start 04/20/2021 14:59 End 04/22/2021 15:04	+	Repeat Start 04/20/2021 S M T W	End 04/22/2026 T F S
		Repeat		Time 15:06	End 15:11
0 ≔	1	0 ≔	2	<b>0</b> ⊫	2

- 1. Always: always has the access to the house anytime
- 2. Schedule: Set start and end dates/times for the guests.
- 3. Repeat: Set start and end dates/times by week for the guests. (For example, Dog walker,

nanny, etc.)

#### SGUDA U-Lock

## Passcode Only



#### 2. Enter the guest's name







3. It also has <u>3 access modes</u>\* for the Passcode users (Always, Schedule and Repeat)

٥		
	Hostel   Room	1 🔅
<		SAVE
How often do	ose Jr. need to ac Room 1?	cess
Always		
Schedule		
Repeat		
0		<b></b>

4. Create a passcode or use the random default passcode > Save > Add user



#### SGUDA U - Locka

# **Settings Introduction**

Go to Settings



on the top right corner > select "lock settings"





## **Keyless Access**



Open the door with one simple touch

## **Fingerprints hiding passcode**

Enter random codes before and after the actual codes to protect privacy.

For example, your actual code is "123456", input random codes before and after as

\*\*\*\*\*123456\*\*\*\*\*

## **Preamble Passcode**

Press random numbers show on the touchscreen keypad before you enter the actual passcode

## **Change Door handing**

Choose your "Lock Position"



## Change Wifi

#### SGUDA U - Lock

Select "Lock Wifi" to change the Wifi

	ə ——	
	Wifi Setup	$\times$
<	Choose a Wifi	C
NET	GEAR25	
deco	o-sguda	
deco	o-sguda	
Set up la	ter in settings	
	$\bigcirc$	

## Auto-Lock

Set a time (10, 30, 60, 90, 120 seconds) for the door to lock automatically



# Customized Sound and LED light (Bluetooth connected)



#### Sound

Settings > Sound



Customized sound when unlock the door



## LED Light

#### **SGUDA U - Lock**a

#### Settings>Light Setting



#### Customized LED light options



## S/N number

#### SGUDA U-Lock

#### Settings>Device information



# Siri, Alexa, Google Assistant

## Siri

1. Settings > Siri Setting



• —	
	$\times$
Setting	
Home and Lock Name	>
Lock Setting	>
Sound Setting	>
Light Setting	>
Siri Setting	>
Notification Setting	>
Alexa Name	>
Google assistant	>
Device Information	>
Test Wifi	>
troubleshotting Help	>
Drop out lock	>
$\bigcirc$	

#### 2.Add to Siri

#### SGUDA U - Lock



## Alexa

Download the Amazon Alexa app before the following instructions

1. Settings > Alexa > Set a Name











3. Go to Search on the top right corner > Search "SGUDA"



#### SGUDA U-Lock

4. Enable to use > Login to your SGUDA account



5. Successfully linked the account > Close



6. Linking your device to SGUDA U-Lock: Tap "Discover Device"





## **Google Assistant**

Download the Google Home app before following the instructions

Settings Settings Google Assistant





2. Set a code for the Google Home app > SAVE





3. Open the Google Home app > Get started > Select and login to your Google account

• —	• —
	<
Welcome home	Confirm account
Control your content and devices from one place.	Use this account with the Google Home app
	SGUDA TAIWAN sguda.taiwan@gmail.com
	Use another account
	Your use of Google services and devices, including this app, are covered by the Google Terms of Service and Privacy Policy.
Get Started	UK.

4. Tap + > Set up a device > Works with Google

#### SGUDA U-Lock



5. Add devices:

Search "SGUDA" > add SGUDA Lock



6. Sign in with your SGUDA account > Choose a device > Next

#### SGUDA U - Locka



7. Choose a home > Choose a location for your lock>Next





9. Testing your Google Assistant

"Ok Google, open \_\_\_\_\_"(your lock name)

Now you will be asked a code "123456" that you have set in the SGUDA app (step 2)

#### SGUDA U-Lock

# **Notification Setting**

1. Settings >Notifications

#### You can turn on/off the notifications as below



#### SGUDA U-Locka

## Bluetooth

#### 1.Go to Settings > Device Information



2. Select "Update" > Bluetooth > Download > Next





3. Remove the battery and hold the reset button > resume the power > the lock will start flashing

white light ( into OTA mode) > Next



4. OTA mode: Select "Dfutarg" (refresh if it doesn't show up)

No SIM 奈	4:49 PM	۰ 🕫 63% 🔳
< Back		$\times$
		С
DfuTarg		

6. Updating completed > tap "X" to exit

#### SGUDA U-Lock





## Wifi

1. Go to Settings > Device Information



• —	
	$\times$
Setting	
Home and Lock Name	>
Lock Setting	>
Sound Setting	>
Light Setting	>
Siri Setting	>
Notification Setting	>
Alexa Name	>
Google assistant	>
Device Information	>
Test Wifi	>
troubleshotting Help	>
Drop out lock	>
$\bigcirc$	

#### 2. Select "Update" > Wifi > update

#### SGUDA U-Locka



#### 3. Updating



#### 9. Make sure to restart the power

#### SGUDA U-Lock



## **Unlink U-Lock**

#### 1. Go to Settings > Unlink



2. Check the box to unlink, the lock will flash red light when you unlink successfully



# **Reset U-Lock**

1. Remove the cover and press Reset button for 5 seconds



#### SGODA 2. tap the random 4 digits on the keypad > Reset complete (the lock will flash red light)CK





www.SGUDA.com SGUDA.ADS@gmail.com 12F.-10, Ln. 256, Sec. 2, Xitun Rd., Xitun Dist., Taichung City 407 Taiwan